 



Lynx Distributor Adapter Cable Wiring Diagram



12v-24v to 5v step down

*Not compatible with 48v systems

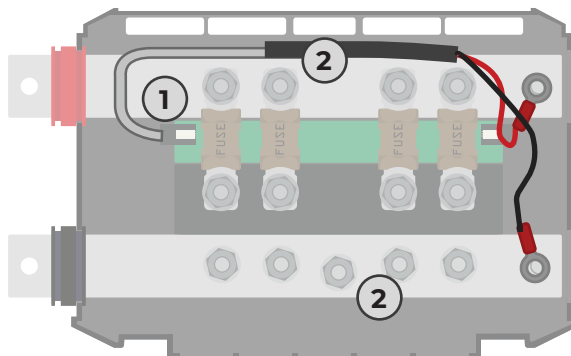

1 - Install the RJ11 plug into the input port for Lynx Communication

2- Secure positive and negative ring terminals to a convenient terminal as shown.